

General description (fig. 1)

- A** Crumb tray
- B** Toasting lever
- C** Stop button
- D** Defrost function
- E** Browning control

Important

Read these instructions for use carefully before using the appliance and save them for future reference.

- ▶ Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- ▶ Only connect the appliance to an earthed wall socket.
- ▶ If the mains cord is damaged, it must be replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- ▶ Do not immerse the appliance or the mains cord in water or any other liquid.
- ▶ Always unplug the appliance after use.
- ▶ Keep the appliance out of the reach of children.
- ▶ Do not let the mains cord hang over the edge of the table or worktop on which the appliance is standing and keep the cord away from hot surfaces.
- ▶ Do not let the appliance operate unattended. Do not operate it under or near curtains or other flammable materials or under wall cabinets, as bread may burn.
- ▶ Avoid touching the metal parts of the toaster as they become very hot during toasting. Only touch the controls and lift the appliance by its plastic body.
- ▶ The toaster is intended for household use only and may only be used indoors.
- ▶ To avoid the risk of fire, frequently remove crumbs from the crumb tray. Make sure the crumb tray is correctly placed.
- ▶ Immediately unplug the toaster if fire or smoke is observed.
- ▶ If a slice of bread gets stuck inside the toaster, unplug the appliance and let it cool down before trying to remove the bread. Do not use a knife or a sharp tool, as these may cause damage to the heating elements.
- ▶ The appliance is only meant for toasting bread. Do not put any other ingredients in the appliance, as this may lead to a hazardous situation.
- ▶ Oversized foods and metal foil packages must not be inserted into the toaster, as this may cause fire or electric shock.
- ▶ Do not place the toaster on a hot surface.

Before first use

Remove any stickers and wipe the body of the toaster with a damp cloth.

Before using the appliance for the first time, we advise you to let the appliance complete a few toasting cycles without slices of bread on the highest browning setting in a properly ventilated room. This will burn off any dust that may have accumulated on the heating elements and will prevent unpleasant smells when toasting bread.

- Using the appliance**
- 1 Put the appliance on a stable and flat surface, away from curtains and other combustible materials. Put the plug in the wall socket.
 - 2 You can adjust the length of the cord by winding part of it round the brackets in the base of the appliance (fig. 2).

Toasting bread

Never let the toaster operate unattended.

- 1 Put one or two slices of bread in the toaster (fig. 3).
- 2 Select the desired browning setting (fig. 4).
Select a low setting (1-2) for lightly toasted bread and a high setting (5-7) for darkly toasted bread. Select the defrost function ❄ (settings 6 to 7, depending on the desired browning degree) for toasting frozen bread.
- 3 Push the toasting lever down to switch the appliance on (fig. 5).
The toasting lever will only stay down if the appliance has been connected to the mains.

The metal parts of the toaster will get hot during toasting. Be careful not to touch them.

- 4 When the toast is ready, it pops up and the toaster switches off.
 - 2 The toaster will switch off automatically. You can stop the toasting process and pop the bread up at any time by pressing the stop button on the side of the toaster (fig. 6).
 - 2 To remove smaller items, you can move the toasting lever upwards a little further.
 - 2 If bread gets stuck inside the toaster, remove the plug from the wall socket, let the appliance cool down completely and carefully remove the bread from the toaster. Do not use a knife or another sharp metal tool to do this and do not touch the metal internal parts of the toaster.

Cleaning

- 1 Unplug the appliance.
- 2 Let the appliance cool down.
- 3 Clean the appliance with a damp cloth. Do not use abrasive cleaning agents.

Never immerse the appliance in water.

- 4 Remove crumbs from the appliance by sliding the crumb tray out of the appliance (fig. 7).
Do not hold the appliance upside down and do not shake it to remove the crumbs.

Environment

- 2 Do not throw the appliance away with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this you will help to preserve the environment (fig. 8).

Guarantee & service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you will find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, turn to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.